


Changing Target Archery Timing

Chronotir




Old controller on left, newer version on right, buttons are the same


1: Turn on

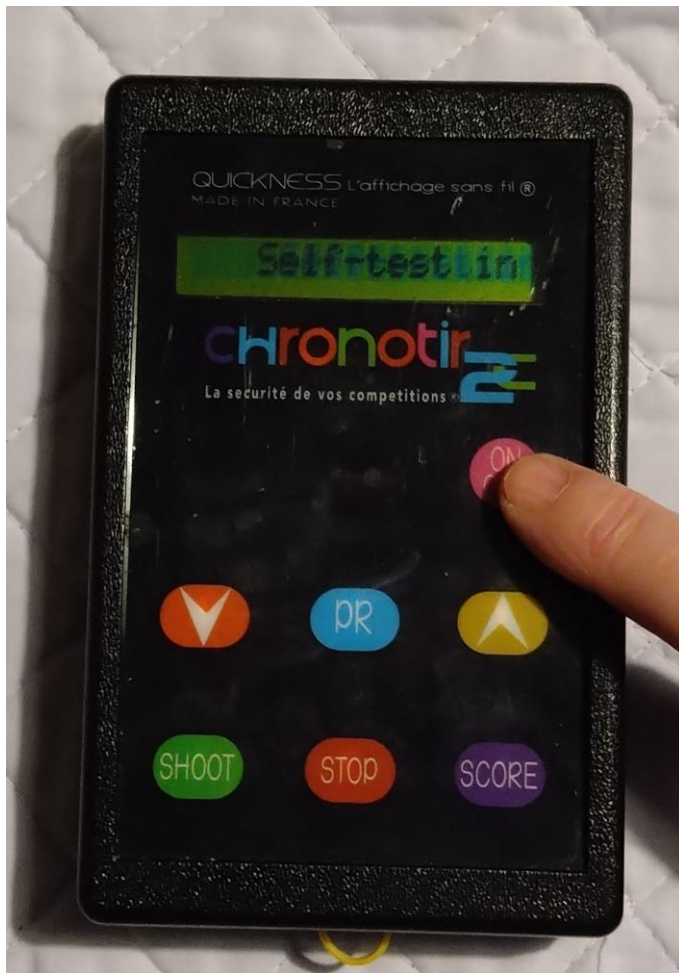


2: Hold down the PR (Programme Button) until shoot time flashes

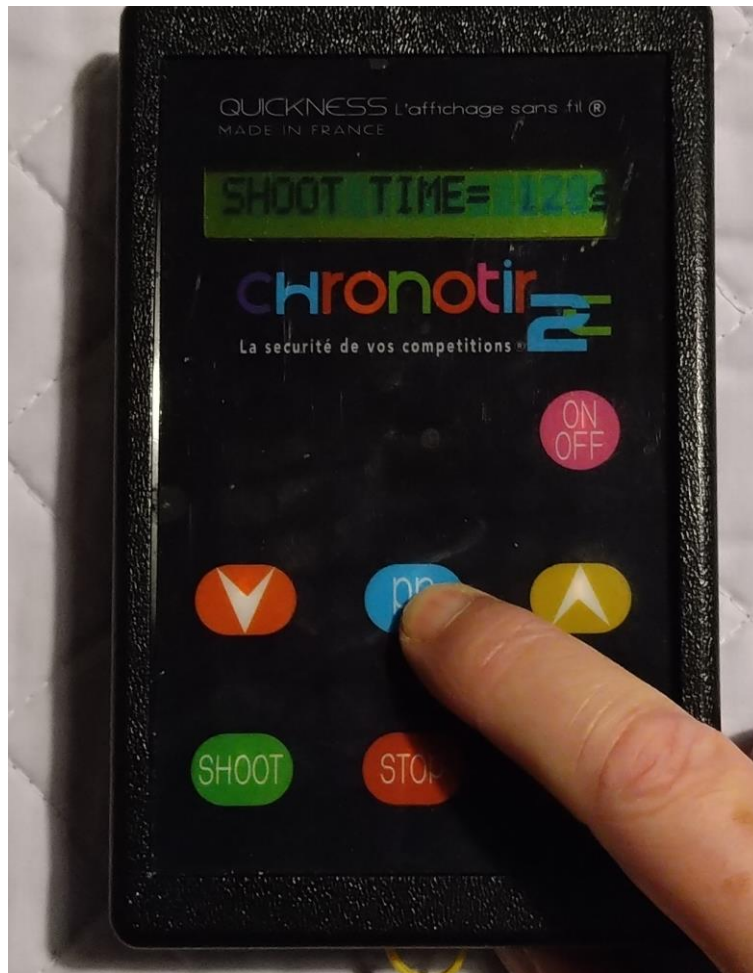


3: Tap the up arrow until the time increases to 180s (seconds)

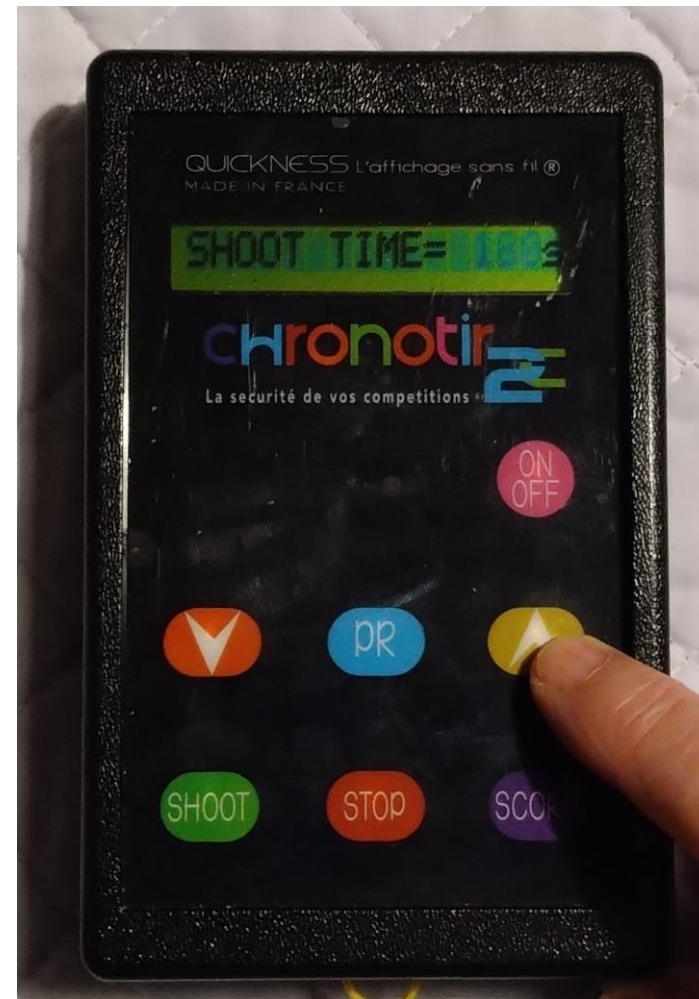


4: OR tap the down arrow until the time decreased to 90s (seconds)

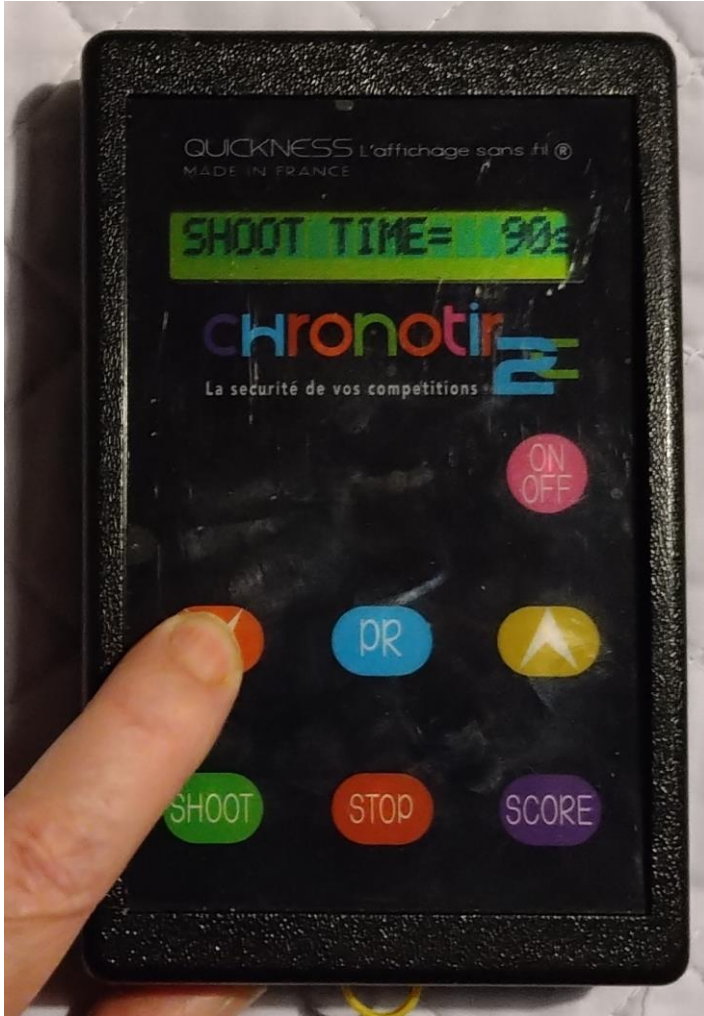

4: Tap PR to check Pre-shoot (10 seconds) and again to see Amber (30 seconds)

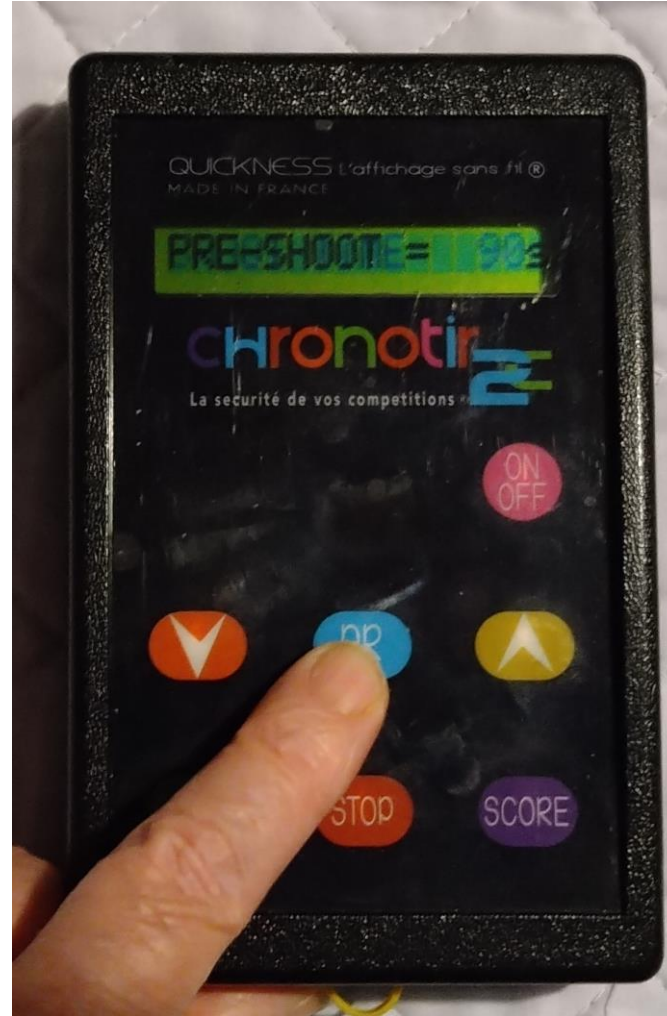

4: HOLD DOWN PR to exit programming mode

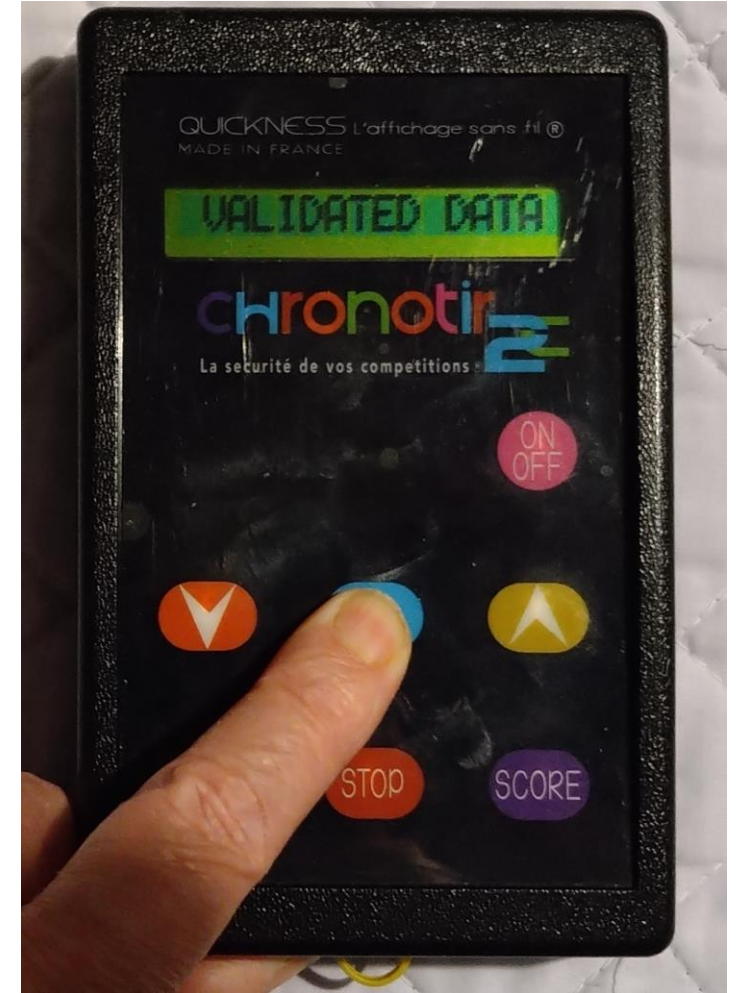

5: If using double detail use the Down arrow to cycle through AB/CD etc (only shows on timing clocks, not on the controller)